


## Instructions





### Stripping Insulation

1. Pull off the cap and remove the wire stripper from the handle.
2. Press the wire to be stripped down into the wire stripper's slot, about 1 inch from the end.
3. Hold the wire stripper with the blade away from you and push the stripper away from you to strip the insulation.

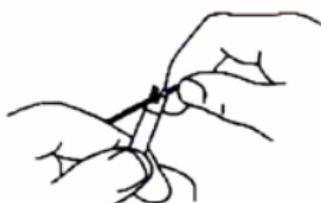

### Wrapping Wire

1. Insert the NiChrome wire into the tool's half moon shaped hole and out through the groove.
2. Bend the wire over the end of the tool.
3. Insert the stripped lead wire into the center hole.
4. Hold the Nichrome wire and turn the tool clockwise until the Nichrome in the groove is wrapped around the lead wire.

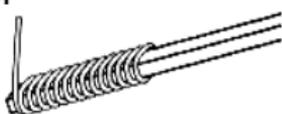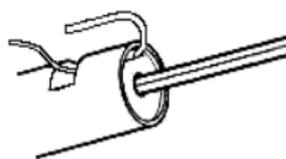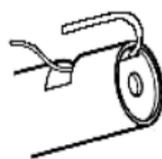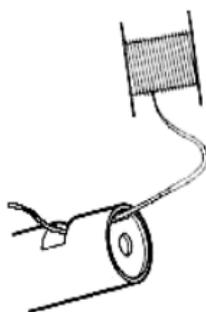

### Unwrapping Wire

1. Place the Lead Wire tool into the center hole so the wrapped wire seats in the end of the
2. Turn the tool counterclockwise.

